

Product number	Description
FROG-10	FROG float switch with 10 mtr. cable. NC + NO function.
FROG-20	FROG float switch with 20 mtr. cable. NC + NO function..
FROG-vægt	Counterweight for FROG.



Local Supplier:

Frog Quickguide

About Frog

FROG is a standard float switch with a microswitch for either Normally Open (NO) or Normally Closed (NC) signal.

FROG comes in 2 versions with either 10m or 20m fixed-mounted, highly flexible cable.

Suspension brackets are included in both versions.


Applications

FROG is designed as a high-water alarm in pumping stations, low-water alarms in clean water tanks, as water on floor alarms and as primary controller for pumps and many other applications.

Installation and specifications

For installation of the FROG, the following specifications may be required.

NOTE! FROG is not EX-rated and therefore cannot be used for installation in EX areas.

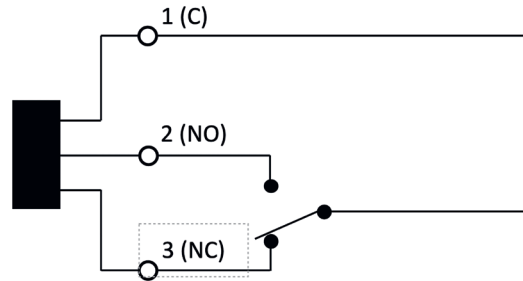

Switch system	Microswitch
Maximum voltage	Max 250V AC
Maximum current	6A Resistive, 3A inductive
Pressure area	200kPA
Cable length	10m/20m
Maximum diameter	99mm
Length of float element	140mm
Float element material	Polypropylene (PP)
Cable material	PVC
Enclosure class	IP67
Max. operating temperatur	+55oC
Buoyancy	6N
Certificate	CE

